

INSTRUCTION UPDATE

8.20. Adjustable canopy

In order to fold / unfold the canopy its top must be pulled in an appropriate direction and then set in required position. Canopy can be extended using zipper located in the upper part of the canopy.



Fig. 8.20.a



Fig. 8.20.b



Fig. 8.20.c

NEW INFORMATION

Angular adjustment of the backrest.

This buggy is equipped with adjustable backrest that can be slightly leant back. In order to change its angle backrest lock must be pulled up and released, then the backrest can be set in required position. Once backrest is adjusted its lock must be pulled down and set to its original position.

